


Dosing Valve EVN 116






BP 805 005 BE (0011)

Product Identification

In all communications with Pfeiffer Vacuum, please specify the information on the product nameplate. For convenient reference copy that information into the space provided below.

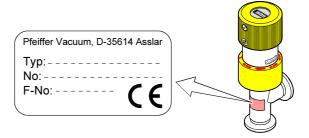

Validity

This document applies to products with part number PFI32031.


The part number can be taken from the product nameplate.

Intended Use

The manually actuated EVN 116 Dosing valve is used for both, gas dosing and shutting off a defined gas flow without changing the gas flow setting.

The EVN 116 must not be used in connection with liquid gases.

Functional Principle

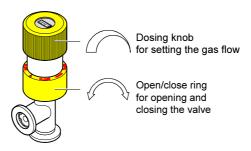

Rotating the dosing knob translates into a linear movement and places the dosing needle reproducibly in the desired position.

Rotating the Open/close ring positions the valve plate. These movements are independent of each other.



Contents

Product Identification	2
Validity Intended Use	2
Function	2 2 2
1 Safety	4
1.1 Symbols Used	4
1.2 Personnel Qualifications	4
1.3 General Safety Instructions	5
1.4 Liability and Warranty	5
2 Technical Data	6
3 Installation	8
4 Operation	10
5 Gas Flow	12
5.1 Gas Flow Curve	12
5.2 Conversion Table	12
6 Deinstallation	13
7 Maintenance	15
8 Repair	17
9 Accessories	18
10 Storage	19
11 Returning the Product	19
12 Disposal	20
Declaration of Contamination	21
Manufacturer's Declaration	

For cross-references within this document, the symbol $(\rightarrow \ \ \cong \ XY)$ is used, for cross-references to other documents, the symbol $(\rightarrow \ \ \square \ \ [Z])$.

BP 805 005 BE (0011) EVN 116.oi 3

1 Safety

1.1 Symbols Used



DANGER

Information on preventing any kind of physical injury.



WARNING

Information on preventing extensive equipment and environmental damage.



Caution

Information on correct handling or use. Disregard can lead to malfunctions or minor equipment damage.

1.2 Personnel Qualifications



Skilled personnel

All work described in this document may only be carried out by persons who have suitable technical training and the necessary experience or who have been instructed by the end-user of the product.

1.3 General Safety Instructions

- Adhere to the applicable regulations and take the necessary precautions for the process media used.
- Adhere to the applicable regulations and take the necessary precautions for all work you are going to do and consider the safety instructions in this document.
- Before beginning to work, find out whether any vacuum components are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Communicate the safety instructions to all other users.

1.4 Liability and Warranty

Pfeiffer Vacuum assumes no liability and the warranty becomes null and void if the end-user or third parties

- disregard the information in this document
- use the product in a non-conforming manner
- make any kind of interventions (modifications, alterations etc.) on the product
- use the product with accessories not listed in the corresponding product documentation.

The end-user assumes the responsibility in conjunction with the process media used.


BP 805 005 BE (0011) EVN 116.0i 5

2 Technical Data

Connection flanges	DN 16 ISO-KF
Mounting orientation	any
Dosing range	5×10 ⁻⁶ 1000 mbar l/s
Tightness	1×10 ⁻⁹ mbar l/s
Pressure difference	≤2.5 bar
Operating temperature	80 °C
Bakeout temperature	≤150 °C *)
Storage temperature	5 40 °C
Dead volume	0.032 cm ³
Materials Housing, needle, filter	stainless steel
3 , ,	
Dosing sleeve	fluor plastomer
Seal	FPM75
Weight	400 g

*) at the flange connections


Dimensions

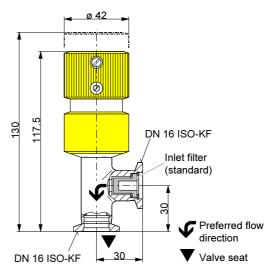

Gas flow with standard filter 1700 mbar I/s Gas flow without standard filter 3100 mbar I/s


Accessories

Filter

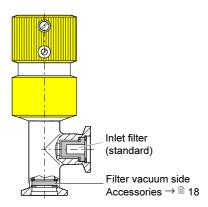

Gas flow 590 mbar l/s

Filter

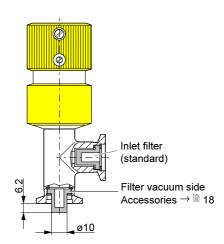

Gas flow 1250 mbar l/s

3 Installation



DANGER



Caution: overpressure in the vacuum system >1 bar

Injury caused by released parts and harm caused by escaping process gases can result if clamps are opened while the vacuum system is pressurized.

Do not open any clamps while the vacuum system is pressurized. Use the type clamps which are suited to overpressure.



Caution



Caution: dirt sensitive area

Touching the product or parts thereof with one's bare hands increases the desorption rate.

Always wear clean, lint-free gloves and use clean tools when working in this area.



Caution




Caution: vacuum component
Dirt and damages impair the function of the
vacuum component.

When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.




Keep the lids.

Flow direction

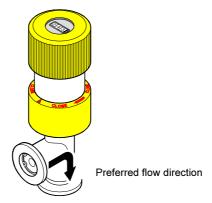

Vacuum connection

Remove the lid and connect the valve to the vacuum system using the small flange connections.

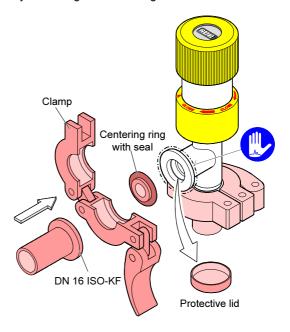

4 Operation

The product is ready for operation as soon as it has been installed.




DANGER





Caution: hot surface

Touching the hot surface (>55 °C) can cause burns

Wear protective gloves.

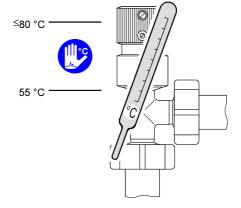


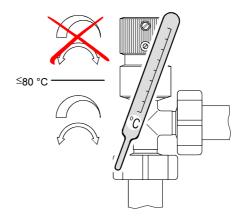

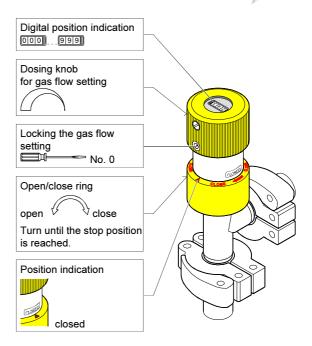

Dead volume

Due to the gas dosing and valve seat seals,there is a dead volume of 0.032 cm³.

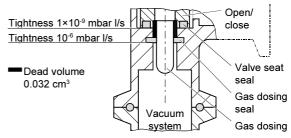



If the pressure in the dead volume is higher than in the vacuum system, the pressure between the dead volume and the vacuum system is compensated. During the compensation phase, one could come to the **false** conclusion that the valve is not tight.

Leak flow rate for pressure compensation = 10^{-6} mbar l/s x pressure difference


BP 805 005 BE (0011) EVN 116.oi 11

5 Gas Flow

5.1 Gas Flow Curve

Using the gas flow curve, the digital indication on the dosing knob and the gas flow can be related to each other.

The gas flow rates in the diagram are mean values.

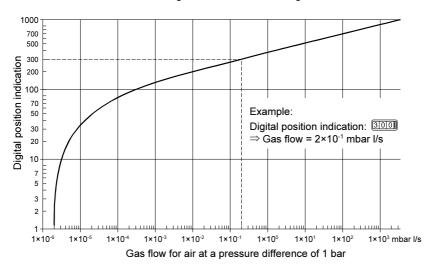

5.2 Conversion Table

Gas flow

	mbar I/s	Torr I/s	sccm	atm cm³/s
mbar I/s	1	0.75	59.2	0.987
Torr I/s	1.33	1	78.9	1.32
sccm	1.69×10 ⁻²	1.27×10 ⁻²	1	1.67×10 ⁻²
atm cm³/s	1.01	0.76	59.8	1

6 Deinstallation



DANGER



Caution: contaminated parts

Contaminated parts can be detrimental to health and environment.

Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.



Caution



Caution: vacuum component Dirt and damages impair the function of the vacuum component.

When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.





Caution



Caution: dirt sensitive area Touching the product or parts thereof with one's bare hands increases the desorption

Always wear clean, lint-free gloves and use clean tools when working in this area.




Vent the vacuum system and let it cool down to <55 °C.

13 BP 805 005 BE (0011) EVN 116.oi




Remove the small flange fittings and put the protective lids in place.

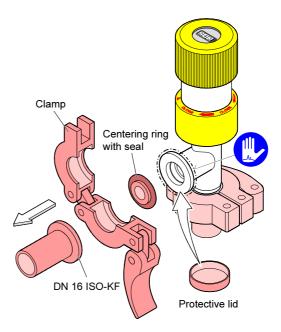


7 Maintenance

Cleaning the filter(s)

- Remove the valve from the vacuum system according to section "Deinstallation".
- Remove the lid(s).

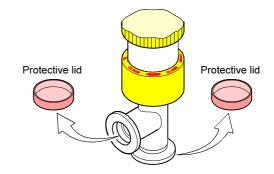

3 Remove the filter(s).

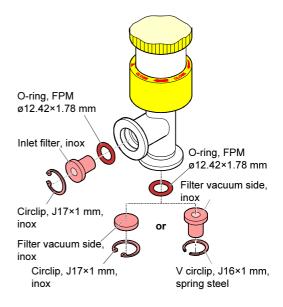

BP 805 005 BE (0011) EVN 116.0i 15

4 Clean the filter(s) with alcohol.



DANGER



Caution: cleaning agents

Cleaning agents can be detrimental to health and environment.

Adhere to the relevant regulations and take the necessary precautions when handling and disposing of cleaning agents. Consider possible reactions with the product materials ($\rightarrow \mathbb{B}$ 6).

5 Dry the filter(s) with compressed air.



DANGER



Caution: compressed air

Unprofessionally handling compressed air can cause physical injuries.

Adhere to the relevant regulations and take the necessary precautions when handling compressed air.



The compressed air must meet the following specifications:

- · free of oil
- dry
- free of particles >25 μm
- Reinstall the filter and connect the Dosing valve to the vacuum system according to section "Installation".

8 Repair

We recommend returning the product to your local Pfeiffer Vacuum service center for repair.

Pfeiffer Vacuum assumes no liability and the warranty becomes null and void if any repair work is carried out by the end-user or third parties.


BP 805 005 BE (0011) EVN 116.oi 17




9 Accessories

If the dosing needle can be contaminated by the process, installing a filter at the vacuum port of the valve is strongly recommended.

Filter vacuum side (gas flows 590 mbar l/s)

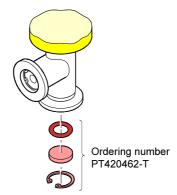

Filter vacuum side (gas flow 1250 mbar l/s)

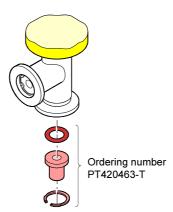

10 Storage



Caution



Caution: vacuum component
Inappropriate storage leads to an increase of
the desorption rate and/or may result in
mechanical damage of the product.
Cover the vacuum ports of the product with

Cover the vacuum ports of the product with protective lids or grease free aluminum foil. Do not exceed the admissible storage temperature range ($\rightarrow \blacksquare 6$).

11 Returning the Product



WARNING



Caution: forwarding contaminated products Contaminated products (e.g. radioactive, toxic, caustic or microbiological hazard) can be detrimental to health and environment. Products returned to Pfeiffer Vacuum should preferably be free of harmful substances. Adhere to the forwarding regulations of all involved countries and forwarding companies and enclose a duly completed declaration of contamination (\rightarrow \blacksquare 21).

Products that are not clearly declared as "free of harmful substances" are decontaminated at the expense of the customer.

Products not accompanied by a duly completed declaration of contamination are returned to the sender at his own expense.

BP 805 005 BE (0011) EVN 116.0i

12 Disposal



DANGER



Caution: contaminated parts

Contaminated parts can be detrimental to health and environment.

Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.



WARNING



Caution: substances detrimental to the environment

Products or parts thereof (mechanical and electric components, operating fluids etc.) can be detrimental to the environment.

Dispose of such substances in accordance with the relevant local regulations.

Separating the components

After disassembling the product, separate its components according to the following criteria:

Contaminated components

Contaminated components (radioactive, toxic, caustic, or biological hazard etc.) must be decontaminated in accordance with the relevant national regulations, separated according to their materials, and disposed of.


Other components

Such components must be separated according to their materials and recycled.

Declaration of Contamination

The service, repair, and/or disposal of vacuum equipment and components will only be carried out if a correctly completed declaration has been submitted. Non-completion will result in delay.

This declaration may only be completed (in block letters) and signed by authorized and qualified staff.

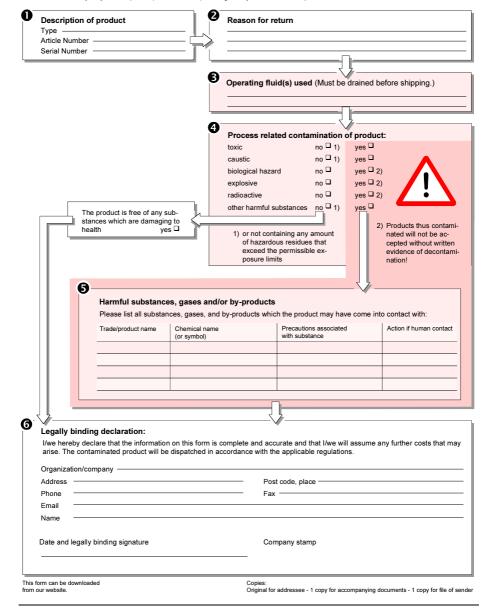

Manufacturer's Declaration



as defined by the Directive relating to machinery 98/37/EC, Appendix IIb.

We, Pfeiffer Vacuum, hereby declare that putting the incomplete equipment mentioned below into operation is not permitted until evidence is given that the system into which that incomplete equipment shall be installed is in accordance with the provisions of the EC Directive relating to machinery.

Product Dosing Valve

EVN 116

Part number PFI32031

Standards Harmonized and international/national standards and

specifications:

• EN 292-1/-2 (Safety of machinery)

• DIN 28403 (ISO 2861 small flange connections)

Signature Pfeiffer Vacuum GmbH, Asslar

29 November 2000

Wolfgang Dondorf Managing director Notes

BP 805 005 BE (0011) EVN 118.oi 23



Emmeliusstrasse 33 D-35614 Asslar Deutschland Tel +49 (0) 6441 802-0 Fax +49 (0) 6441 802-202 info@pfeiffer-vacuum.de

www.pfeiffer-vacuum.de